

PEDESTRIAN PUSH BUTTONS

Blank & Cast Legend Stations



ITEM	DESCRIPTION	PART NO.
------	-------------	----------

PUSH BUTTON STATION ASSY,

Cast Legend:

①	9" x 12" w/ Heavy Tension Switch w/ Boot	SE-2046
②	5" x 7-3/4" w/ Heavy Tension Switch w/ Boot	SE-2087
③	5" x 7-3/4" w/ Mechanical Switch w/ Ball	

& 2" Mushroom Plunger

SE-2091

Blank Face:

 
④	9" x 12" w/ Heavy Tension Switch w/ Boot	SE-2082
⑤	5" x 7-3/4" w/ Heavy Tension Switch w/ Boot	SE-2086
⑥	5" x 7-3/4" w/ Mechanical Switch w/ Ball	

& 2" Mushroom Plunger

SE-2105

Notes:

1. All assemblies are supplied standard with stainless steel fasteners.
2. For pedestrian signs refer to page 15 of this catalog section.
3. Please specify options when ordering.

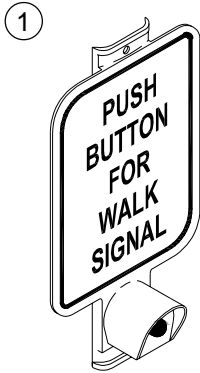

OPTIONS
Legend: 1030, 1031, 1032, 1004, or 1039
PAINT



Left Man/
Left Arrow
(1030)



Right Man/
Right Arrow
(1031)



Right Man/
Double Arrow
(1032)






Instruction
(1004)



Instruction
(1039)



   ITEM 2-3 OPTIONS
Legend: 1030, 1031, 1032, or 1004
PAINT

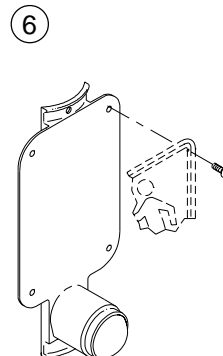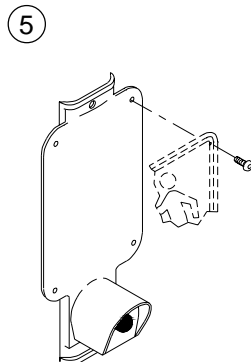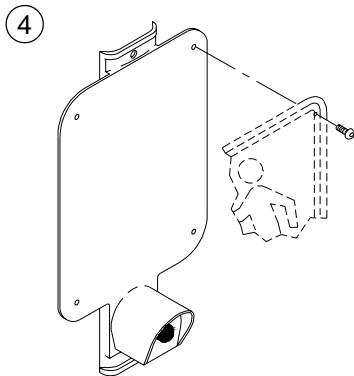

ITEM 4-6 OPTIONS
PAINT